

OPERATING INSTRUCTIONS

BT-C2000 Version 2.2



1. Intended Use

The charger is intended to charge and discharge NiCd or NiMH chemistry rechargeable batteries only. It provides four independent charging slots for AA or AAA rechargeable batteries. The included adapters provide the additional ability for C & D size rechargeable batteries. The charger can also test and optimize the maximum capacity of the rechargeable batteries. Each charging slot has its own display to show various information such as, charging current, battery voltage, charged capacity, discharged capacity, battery internal resistance and time. Second generation hardware including Delta-Sigma 16 bit ADC provides improved charging circuit performance and thermal management.

The charger can charge or test batteries of different type, different size, and different capacity at the same time. Each charging slot may be programmed with a different working mode and current parameters if desired. When charging is complete FULL will show in that channel display then the maintenance charge is started automatically.

This product fulfills European and national requirements related to electromagnetic compatibility (EMC). CE conformity has been verified and the relevant statements are available upon request.

Unauthorized conversion or modification of the charger is prohibited and voids the manufacturer's warranty. Any usage other than described above is not permitted and can damage the product and lead to associated risks such as short-circuit, fire, electric shock, etc. Please read the operating instructions thoroughly and keep them for future reference.

2. Safety Instructions



The manufacturer assumes no liability for damages to property or personal injury if the product has been abused, modified or damaged by improper use or failure to observe these operating instructions.

2.1 Product Safety

- The product must not be exposed to substantial mechanical strain or strong vibrations.
- Do not operate the charger if it appears damaged in any way.
- **The product must be protected against strong electromagnetic fields, static electrical fields, extreme temperatures, direct sunlight and moisture.**
- The manufacturer's instructions for the respective batteries must be observed. Ensure the batteries can accept the programmed charge and discharge rates before attempting charging.
- The product should not be connected immediately after it has been brought from an area of cold temperature to an area of warm temperature. Condensed water might cause damage. Wait until the product adapts to the new

ambient temperature before use.

- The product is to be used only in an indoor dry environment.
- Sufficient ventilation must be provided when operating the charger. Never cover the ventilating slots of the charger. Ensure adequate ventilation for the batteries under charge. Do not place the unit on the carpet as this can block ventilation slots on the charger body. Operate only in a well ventilated area.


2.2 Battery Safety

- Correct polarity must be observed while inserting the batteries. Always insert the battery cells with the positive tip facing the top of the charger.
- **Non-rechargeable batteries, rechargeable alkaline batteries (RAM), alkaline batteries, lead acid batteries and lithium batteries must not be charged with this product. There is danger of fire or explosion!**
- Batteries should be removed from the device if it is not used for a long period of time to avoid damage through leaking. Leaking or damaged batteries might cause chemical burns when in contact with skin; therefore use suitable protective gloves to handle corrupted batteries.
- Batteries must be kept out of reach of children and pets.
- Batteries must not be dismantled, short circuited or thrown into fire. Never allow battery contacts to become shorted.
- Use only NiMH or NiCd rechargeable batteries. Never recharge non-rechargeable batteries due to risk of fire or explosion of the batteries.

3. Delivery Contents

Battery Charger BT-C2000	1pc
Wall Power Adapter	1pc
Operation Instructions	1pc
C & D cell adapters	2 pc's

4. Operating Elements

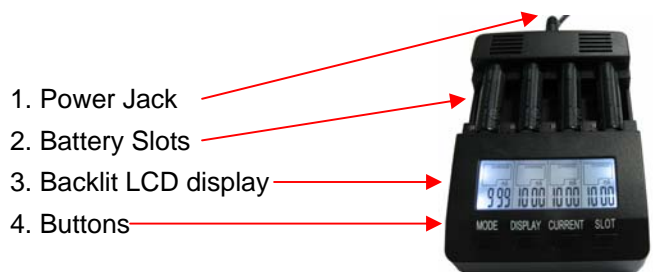

1. Power Jack



5. Power Supply

The wall power adapter included is the main power supply for this charger. Only approved power supplies may be used to power the BT-C2000 charger. The included power supply provides +12Vdc at 1.0A. It has a coaxial DC power plug, which inserts into the power jack on the rear of the charger main unit, of 5mm OD, 2.1mm ID with center positive. The charger may be operated from approved portable power adapters that supply the correct voltage and minimum current requirements.

6. Operation

Upon initial power application the firmware revision level is displayed in the left most digits of the display. After approximately one second all display segments are displayed for approximately two seconds. The "null" icon will then be shown for all channels until batteries are inserted. This indicates that all internal self-tests passed and the charger is ready for use.

Once a rechargeable battery is inserted, its instantaneous voltage will be displayed for 3 seconds. Mode CHARGE and current value 400 mA will be displayed for another 3 seconds. If no button is pressed during these 6 seconds, the charging process will start at the default value of 400 mA. Any button press during this 6 second time will cause the charger to wait for another 10 seconds before entering the working mode.

If no particular slot is selected by pressing the SLOT button, the MODE, DISPLAY and CURRENT buttons refers to all 4 slots simultaneously. Flashing channel display indicates selection of that channel. All four channel displays flashing indicates that MODE, DISPLAY and CURRENT buttons refer to all four channels simultaneously. The charger display backlight turns on after each key press and remains on for 30 seconds after the last key press.

6.1 MODE Selection

At least one rechargeable battery must be inserted in a channel in order to program the charger.

Press and hold the "MODE" button for 2 seconds to start working mode selection for selected slots.

Press the MODE button subsequently at least one time to toggle among the working modes. Press the MODE button until the desired working mode is shown in the selected channels.

The working mode may be changed any time while a battery is in the charger by pressing and holding the MODE button for 2 seconds.

Working Modes:

CHARGE

DISCHARGE

DISCHARGE - REFRESH

CHARGE - TEST

QUICK TEST

CHARGE Mode:

In the CHARGE mode the rechargeable battery is charged up to its maximum capacity at the selected current. Charge termination or full charge is determined with a modified -dV (minus delta voltage) algorithm. The proprietary modified algorithm ensures that full charge termination is detected by the charger, even at low charge currents. Once full charge is detected the charger enters a maintenance charge process supplying minimum charge to the cell so that it remains at full capacity until ready to use.

Note: When attempting to charge cells with high impedance, the charger will not reject the cells as with some other chargers. Instead the cell will be charged at a reduced current from the programmed setting. This will allow charging of high resistance cells so that they may be cycled to improve their capacity and internal resistance.

Example: Insert battery into a slot. CHARGE will flash in that channel display. Press CURRENT button to select 200, 400, 600, 800, 1000, (1200 or 1400) mA for the charge rate. If CURRENT button is not pressed the current will automatically default to 400 mA.

DISCHARGE Mode:

In the DISCHARGE mode the rechargeable battery is discharged to a preset battery voltage (0.9V) then discharged is terminated. At discharge termination 0 mA current is displayed in that channel display. Press the DISPLAY button to view discharged capacity.

Example: Insert battery into a slot. Press MODE button until DISCHARGE is displayed in that channel. Press CURRENT button to select 100, 200, 300, 400, or 500, (600 or 700) mA discharge rate. If CURRENT button is not pressed the discharge current will automatically default to 200 mA.

DISCHARGE - REFRESH Mode:

In the DISCHARGE-REFRESH mode the rechargeable battery is discharged then charged repeatedly to optimize to its maximum capacity. Old rechargeable batteries or rechargeable batteries that have not been used for a long period of time can be restored with this mode. Depending on the selected discharge and charge current, it can take tens of hours for completion. Refresh mode will make 3 complete discharge-charge working cycles. When the discharge-charge cycles are complete FULL will be displayed in the channel display. Discharged capacity is stored after each discharge cycle and is available by pressing the display button.

Example: Insert battery into a slot. Press the MODE button until DISCHARGE - REFRESH is displayed in that channel. Press the current button for 100, 200, 300, 400, 500, (600 or 700) mA discharge rate. If the CURRENT button is not pressed the discharge current will automatically default to 200 mA.

CHARGE - TEST Mode:

The CHARGE-TEST mode tests the present capacity of a rechargeable battery. The maximum capacity is determined by first fully charging the battery, then discharging the battery while measuring discharge current and time. The battery is then charged to full. After completion of the CHARGE-TEST mode, tested battery capacity is displayed in mAh or AH alternating with the FULL indication.

Example: Insert battery into a slot. Press the MODE button until CHARGE - TEST is displayed in that channel. Press the CURRENT button to select 200, 400, 600, 800, 1000, (1200 or 1400) charge rate. If CURRENT button is not pressed the current will automatically default to 400 mA.

QUICK TEST Mode:

The charger will analyze the dynamic internal battery resistance by applying a load current and this current reading is referred to the voltage drop detected on the battery. Within 10 seconds the tested battery resistance will be displayed in the unit of milliohms (thousandths of an ohm). Only fully charged batteries should be tested for internal resistance. Please note that the internal battery resistance can be very small, and contact resistance can be a major factor; thus with the same battery tested in a different slot or even in the same slot with different contact conditions, measurements can vary by up to 20%.

Example: Insert battery into a slot. Press the MODE button until QUICK TEST is displayed in that channel. This symbol will appear in that channel -- --. Wait for a number or numbers to appear in place of the symbol -- --; this may take 30 seconds or longer. This will be the battery internal resistance in milliohms. A reading of 55 represents 55 milliohms or 0.055 ohms.

NOTE: Due to greater contact resistance, measuring internal resistance of high capacity C and D cells with the included C&D to AA adapters is unreliable. Typically internal resistance of high capacity C and D cells is very low. In this case contact resistance is much greater than the internal resistance of the cell. The added contact resistance of the adapter contacts renders the measurement invalid.

6.2 CURRENT Selection

After the Mode is selected press the CURRENT button to toggle between available charge/discharge current selections. Default charge current is 400 mA. Available selections are 200 mA, 400 mA, 600 mA, 1000 mA. If batteries are inserted in only slots 1 and 4 the charging current can be further selected to 1200 mA or 1400 mA for channels 1 or 4. If charge current is selected to 1200 mA or 1400 mA for channels 1 or 4 and batteries are then inserted into slots 2 and 3, the charge current in slots 1 or 4 will be reduced to 1000 mA maximum.

Discharge current is automatically selected at one half of the charge current. Maximum discharge current is 500 mA . If battery slots 2 or 3 are not occupied then 600 or 700 mA

discharge current may be programmed for discharge current. However actual discharge current may be lower depending on battery internal resistance.

6.3 DISPLAY Selection

Press the DISPLAY button to toggle among the display parameters Voltage, Current, Capacity and Time.

The DISPLAY button also controls the LCD back light function. Press and hold the DISPLAY button for more than 5 seconds to turn the back light on continuous. Press and hold the DISPLAY button again for more than 5 seconds to return the LCD back light to Auto-Off.

- Charge or Discharge: the battery current is displayed.
- Time: The time of the last cycle is displayed.
- Accumulated Capacity: The accumulated charge or discharge capacity is displayed in mAh or Ah.
- Voltage: The battery voltage is displayed.
- Quick Test: displays the measured internal battery resistance in milliohms.
- Full: Battery full charge detected. After full charge detected maintenance charge is initiated.

6.4 SLOT Selection.

Pressing the SLOT button will start the slot selection process in the sequence; Slot 1, Slot 2, Slot 3, Slot 4, All 4 Slots, Exit. Flashing display segment indicates slot selection. If all four display slot segments are flashing, this indicates all four slots selected. Mode and Current selection will then be for the selected slots.

7. Temperature Monitoring

Battery temperature and charger internal temperature are monitored during operation. Battery temperature of 60 degrees Celsius (140 degrees F) or controller board temperature of 77 degrees Celsius (171 degrees F) will cause operation to be suspended. Four batteries are temperature monitored individually. Two controller board sensors monitor charger internal temperature. If controller board over temperature is detected, current will be suspended for the corresponding two battery slots. If battery over temperature is detected only the affected channel current will be suspended accordingly. The charging/discharging process will only resume once the temperature of the batteries drops below 40 degrees Celsius (104 degrees F) or charger controller board temperature drops below 50 degrees Celsius (122 degrees F) as appropriate.

Monitored battery temperature may also modify the charge program selected. Delta T algorithm is not primary for battery full charge determination, however temperature is measured and used to modify the charge profile in a proprietary method. This ensures that battery temperature never approaches critical limits and protects batteries from temperature extremes. As a fail-safe method battery temperature may cause charge termination as full charge event if other parameters are met as well.

8. Maintenance

The device is maintenance free but should be cleaned occasionally. **When cleaning, the device must be removed from any power source.** Only use dry and soft cloth to clean the housing of the charger. Do not use abrasive or solvents.

Repairs may only be performed by authorized repair stations. Any repair or modification not performed by an authorized repair station voids the manufacturer's warranty.

9. Disposal

9.1 Disposal of waste electrical and electronic equipment. In order to preserve, protect and improve the quality of environment, protect human health and utilize natural resources prudently and rationally, the user should return unserviceable product to relevant facilities in accordance with statutory regulations. The crossed-out wheeled bin indicates the product needs to be disposed separately and not as municipal waste.

Never dispose of batteries in a fire. Explosion and personal injury may result.



9.2 Used batteries/rechargeable batteries disposal. Regulations require proper disposal of rechargeable batteries. Disposing used batteries in the household waste is prohibited. Batteries containing hazardous substances are marked with the crossed-out wheeled bin. The symbol indicates that the product is forbidden to be disposed via the domestic refuse. Return used batteries to authorized recycling stations or used battery collection center.



10. Technical Data

Operating Voltage	12V DC (10V min 16V max)	
Power Adapter	Input:	100~240V~, 50/60Hz
	Output:	12V DC, 1.0A
Charging Current range	200 ~ 1400 mA	
Discharge Current range	100 ~ 500 mA	
Max. Charging Capacity	20,000 mAh (20 Ah)	
Operating Temperature	0 to 40 °C	



BT-C2000 Charger with C&D Adapters Installed.

One Year Limited Warranty

Manufactured by:

Opus Instruments Co. Ltd

support@dc-workshop.com